



POWER VESSEL OPERATORS PERMIT
WITHIN THE PORT AND HARBOUR OF TORONTO

Andy Operator

- 123 Any Street
 Anywhere, Ontario
- A2AA1A

height: 200 Gender M DOB 01/01/01


Licence No.

1234567 Date of Issue Dec 24, 2010

Date of Expiry Dec 31, 2011

Power Vessel Operator Permit

Jurisdiction

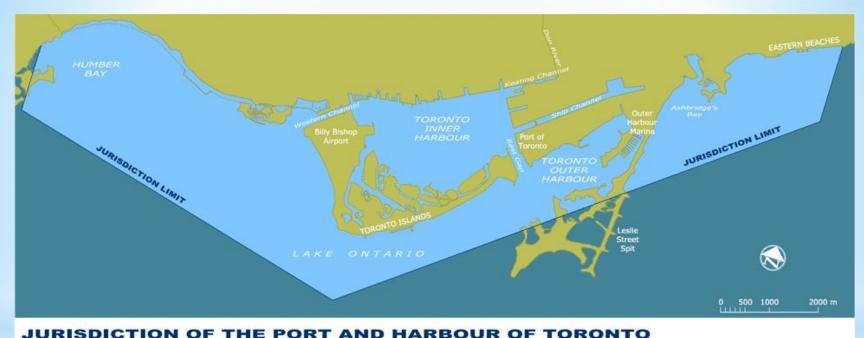

ORISDICTION OF THE PORT AND HARBOOK OF TORONTO

West: 1 mile south of mouth if Humber River

South: 1 mile south of Gibraltar point

East: 1 mile south of old city limit at Victoria park

Requirements

- •must have a <u>Proof of Comptency</u> and Toronto Permit to operate a power vessel
- •must be 14 years of age
- •renewal permits expire Dec 31 renew online at portstoronto.com, by mail, or in person.



No wake behind Western Breakwater and in the Toronto Island lagoons

5 knots within 150 m of any shoreline or breakwater

10 knots elsewhere, including the center of the inner harbour

Operate in a safe manner at all times



JURISDICTION OF THE PORT AND HARBOUR OF TORONTO

No wake behind Western Breakwater and in the Toronto Island lagoons



JURISDICTION OF THE PORT AND HARBOUR OF TORONTO

5 knots

within 150 m of any shoreline or breakwater



JURISDICTION OF THE PORT AND HARBOUR OF TORONTO

10 knots elsewhere,

including the center of the inner harbour


Prohibited Zone Airport





Prohibited Zone Airport

Entry is both a Federal offence, and a fine up to \$ 10,000

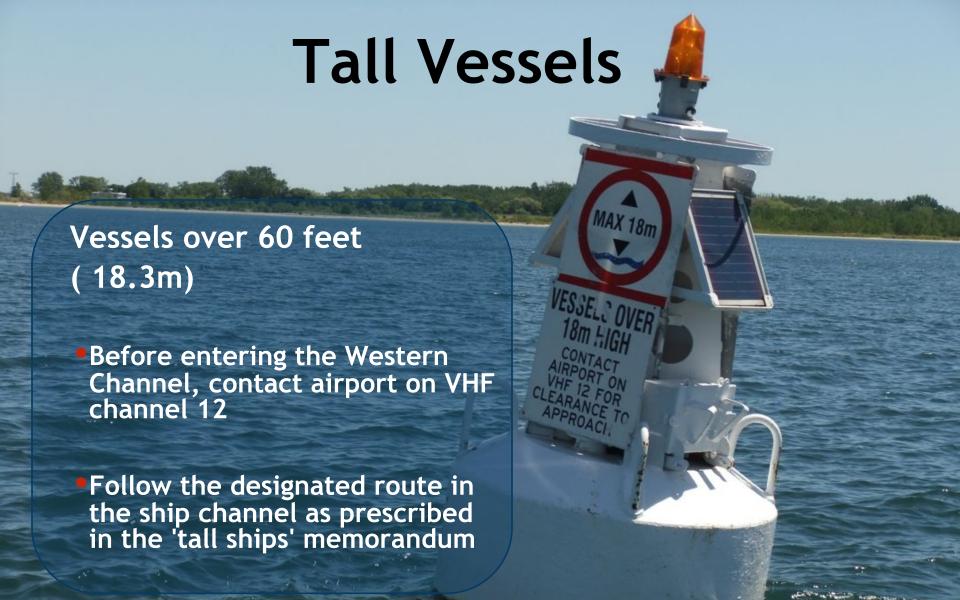



Both skippers are responsible for notifying the Toronto Marine unit on VHF 16 or 416-808-5800





Avoid interfering in any manner with the ferry in the Western Gap and the ferries to the Toronto islands

The ferry in the Western Gap will give one blast as he departs (sometimes)



- No swimming except at designated areas
- No refuse, including oil, gas, tar or paint to be discharged
- Exhaust Noise stock muffler to be used and kept in working order



Safety



Adhere to all small vessel regulations examples:

Identifications marking safety equipment including fire extinguishers

Sound signals fog


every 2 minutes

- •not under power- one long two short
- under power one long

- operating in fog:
- slow down, have an extra lookout
- make sound signals, listen for sound
- turn on navigation lights
- Hoist radar reflector, turn on radar



Collision Regulations Bow to bow

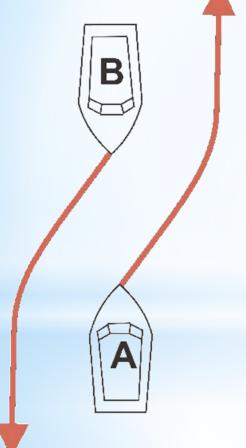

Both vessel go to starboard signal with one short




Collision Regulations Two power vessel at an angle

B must give-way as A is coming from his starboard

Note: B sees the red light on A's port side

A is stand-on as B is coming from his port

Note: A sees the green light on B's starboard side/

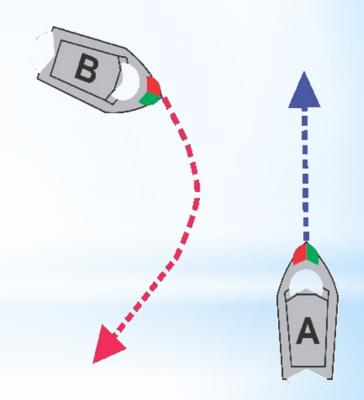


Collision Regulations
Overtaking

The overtaking vessel STAYS CLEAR of the vessel it is overtaking (gives way)

Both B and C are overtaking

vessels 22.5 degrees abaft the beam are overtaking

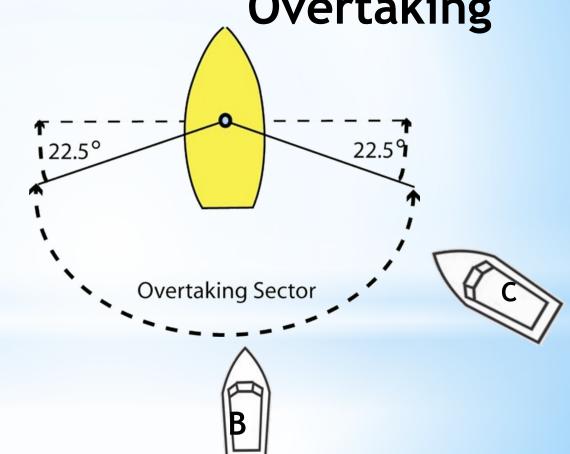



Large vessels are restricted due to draft and maneuverability.

STAY WELL CLEAR







Buoys Diving



STAY WELL AWAY

Stay away twice as far as you think you need to



Safety Crew overboard







All vessels

Must use engines in the Western Channel

Safety Personal Flotation Devices

- PFD required to have <u>one</u>
 <u>Transport Canada approved</u>
 <u>PFD for each person aboard</u>
 (correct size for children)
- May not turn an unconscious person face up, only a SOLAS lifejacket will.





Safety flares







*6 m. to 9 m. vessel - six (6) flares

*9 m. to <u>12</u> m. vessel - twelve (12) flares

validity: 4 years from date of manufacture stamped on the flare

Safety - Distress signals

MARINE RADIO

DISTRESS CALL

Use: 2182 kHz (MF) or channel 16, 156.8 MHz (VHF) DSC alert, channel 70 (only for DSC type radios and where the service is offered)



CALLING PROCEDURES

Mayday Immediate danger for persons or ship Mayday

Mayday

Pan Pan Urgent message about the safety

Pan Pan of a person or ship

Pan Pan


- Give vessel name and call sign
- · State position of vessel
- Describe the emergency

EMERGENCY POSITION INDICATING RADIOBEACONS (EPIRBs)

Use alarm signal



CODE FLAGS

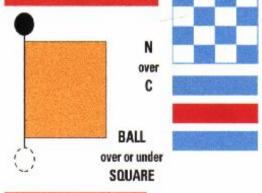

DISTRESS CLOTH

To attract attention: spread on cabin or deck top, or fly from mast.

ARM SIGNAL

Keep raising and lowering outstretched arms.



SOUND SIGNALS

Make continuous sound with any fog-signalling apparatus. Fire a signal gun or other explosive signal at one-minute intervals.

FLARES

Type A: Rocket Parachute Flares Type B: Multi-Star Flares Type C: Hand-Held Flares

Type D: Smoke Signals

(Buoyant or Hand-Held)

DYE MARKER



FLASHLIGHT

Or other light source





Impaired operation Alcohol and Drugs



Can result in loss of <u>BOTH</u> power boat operator permit and vehicle driver's licence, as well as fines.

Power Vessel Operator Testing

written test:

15 correct out of 20


on water test:

- 1. start engine, take safely off the dock
- 2. steer reverse in a straight line
- 3. recover a Crew Overboard use a paddle to recover the fender in the water
- 4. return safely to the dock

On water test Getting off the dock - Operating in reverse

- 1. Turn motor to reverse away from the dock
- 2. Slowly reverse away




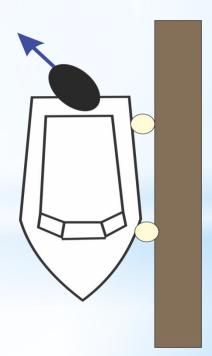

- 1. Approach slowly with the boat 40 degrees to the dock. Use power/no power to control speed.
- 2. Use a short forward burst of power to swing the stern to the dock.
- 3. As needed Turn motor to reverse toward the dock, then use a short reverse burst of power to swing in the stern



on water test docking

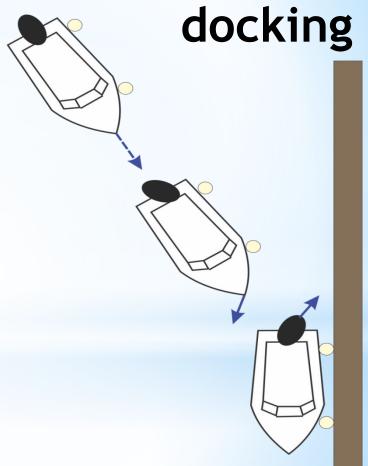

Temporary Permit

TORONTO PORT AUTHORITY 60 Harbour St., Toronto, Ont. M5J 1B7				ADMINISTRATION PORTUAIRE DE TORONTO		
Permit# Issued Expires		Name: Address:				
Name:				Birth Date	Height	Gender
Address:				Written Test Passed Examiner: Practical Date Passe Examiner:		1
Examiner's Signature:		Date Passed		Permit #		

1. Complete the written test. 15 out of 20 is a pass.

Fill in your name and address on both sides of the permit application. Print clearly, be sure to put in date of birth and height and gender on the right portion.

2. Complete the on-water test. The instructor will sign the permit when you pass. You receive the signed left portion as your temporary permit. The right half is sent with the test to the Port Authority. They mail the permanent card to you.

The temporary permit is valid until the card comes in the mail